


**INSTALLATION INSTRUCTIONS**  
**for the**  
**DIAGNOSTICS DISK**  
**on the**  
***Kodak X-Omat 180 LP and LPS PROCESSORS***  
**Service Codes: 3227, 3198**  
***Kodak X-Omat 3000 RA INTEGRATED PROCESSORS***  
**Service Codes: 3488, 3466**  
**with the**  
**5000 BOARD**

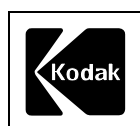

**Important**

Qualified service personnel must install this equipment.



**PLEASE NOTE** The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.



This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

# Table of Contents

Description	Page
Requirements for Installing the DIAGNOSTICS DISK . . . . .	3
Special Tools . . . . .	3
Connecting the INTERFACE CABLE on a 3000 RA INTEGRATED PROCESSOR . . . . .	4
Connecting the INTERFACE CABLE on a 180 LP or 180 PROCESSOR . . .	5
Installing the Diagnostics onto the LAPTOP COMPUTER . . . . .	6
Operating the Diagnostics . . . . .	6
Flowcharts of the Diagnostics . . . . .	7

---

## Requirements for Installing the DIAGNOSTICS DISK



### Caution

Do not install the DIAGNOSTICS DISK on other PROCESSORS. These PROCESSORS have internal diagnostics. Installation of the DIAGNOSTICS DISK can do damage to:

- RAM in the CLOCK MEMORY MODULE on the 5000 BOARD
- PROCESSOR

---

## Special Tools

To install the DIAGNOSTICS DISK, you need:

- INTERFACE CABLE TL-4391
- IBM compatible LAPTOP COMPUTER with:
  - MS-DOS Version 3.0 or higher installed on the HARD DRIVE
  - 720 KB 3 1/2 in. DISK DRIVE
  - SERIAL COMMUNICATION PORT configured as COM 1 - See the User Manual for the LAPTOP COMPUTER.


## Connecting the INTERFACE CABLE on a 3000 RA INTEGRATED PROCESSOR




### Warning

Dangerous Voltage

- [1] De-energize and disconnect the PROCESSOR.
- [2] Connect the INTERFACE CABLE to either:
  - BACK PANEL of the MULTILoader 300 PLUS or the MULTILoader 7000
  - ELECTRICAL BOX
- [3] Connect the INTERFACE CABLE to the LAPTOP COMPUTER.

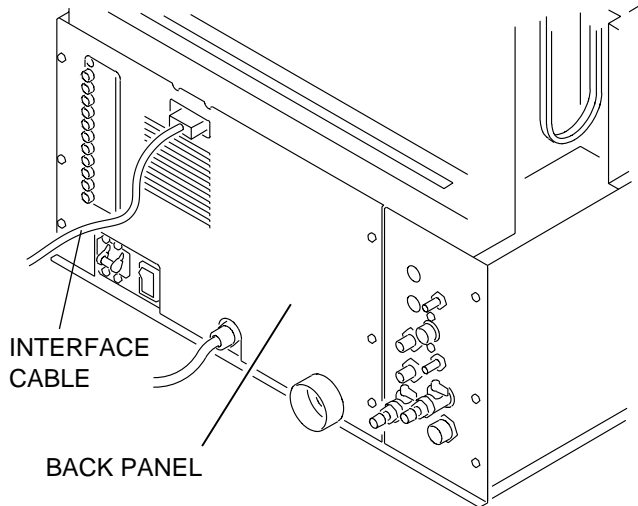

H104\_0391ACB  
H104\_0391AC

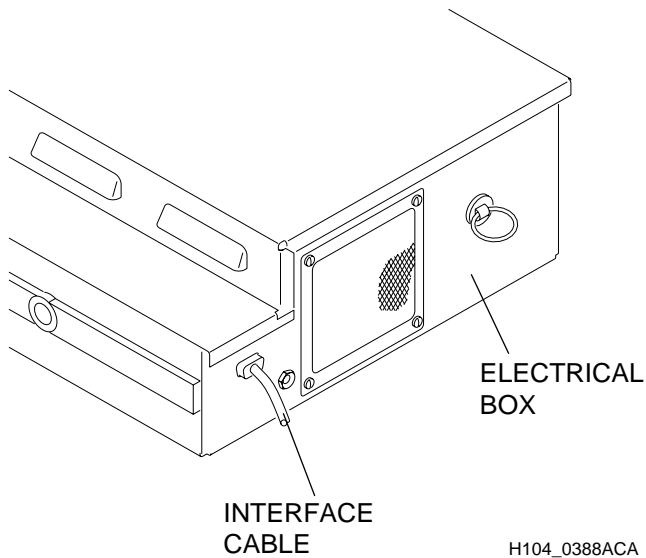

H104\_0388ACA  
H104\_0388AA

---


## Connecting the INTERFACE CABLE on a 180 LP or 180 PROCESSOR



### Warning


Dangerous Voltage

- [1] De-energize and disconnect the PROCESSOR.

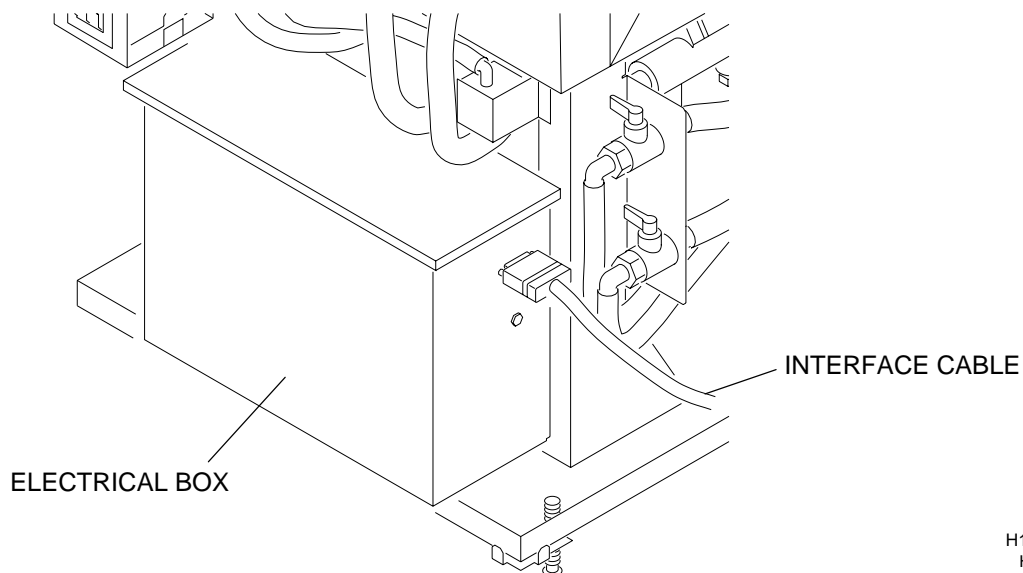

- [2] Connect the INTERFACE CABLE to the ELECTRICAL BOX.

- [3] Connect the INTERFACE CABLE to the LAPTOP COMPUTER.

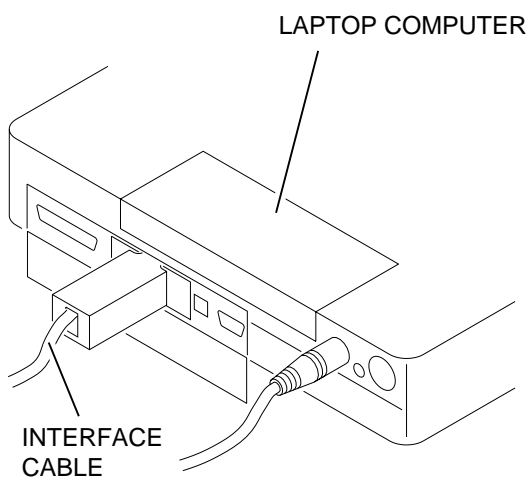


### Installing the Diagnostics onto the LAPTOP COMPUTER

- [1] Move the POWER SWITCH on the LAPTOP COMPUTER to the “ON” position.
  - [2] Insert the DIAGNOSTICS DISK into the A DRIVE.
  - [3] At the “C” prompt, type: **A:RA\_INST**
  - [4] Press [Enter].
  - [5] Wait for the LAPTOP COMPUTER to display the “DIAGNOSTICS” version and copyright screen.
  - [6] Remove the DIAGNOSTICS DISK from the A DRIVE.
- 


### Operating the Diagnostics

- [1] Energize the PROCESSOR.
- [2] Allow the PROCESSOR to operate for a minimum of 10 seconds.
- [3] If you are operating the diagnostics from the HARD DRIVE,
  - a. At the “C:>” prompt, type: **RA**
  - b. Press [Enter].
- [4] If you are operating the diagnostics from the A DRIVE,
  - a. Insert the DIAGNOSTICS DISK into the A DRIVE.
  - b. At the “C:>” prompt, type: **a:**
  - c. Press [Enter].
  - d. At the “A:>” prompt, type: **diag**
  - e. Press [Enter].
- [5] Continue through the diagnostics by following the instructions that the LAPTOP COMPUTER displays. See “Flowcharts of the Diagnostics” on Page 7.


# Flowcharts of the Diagnostics

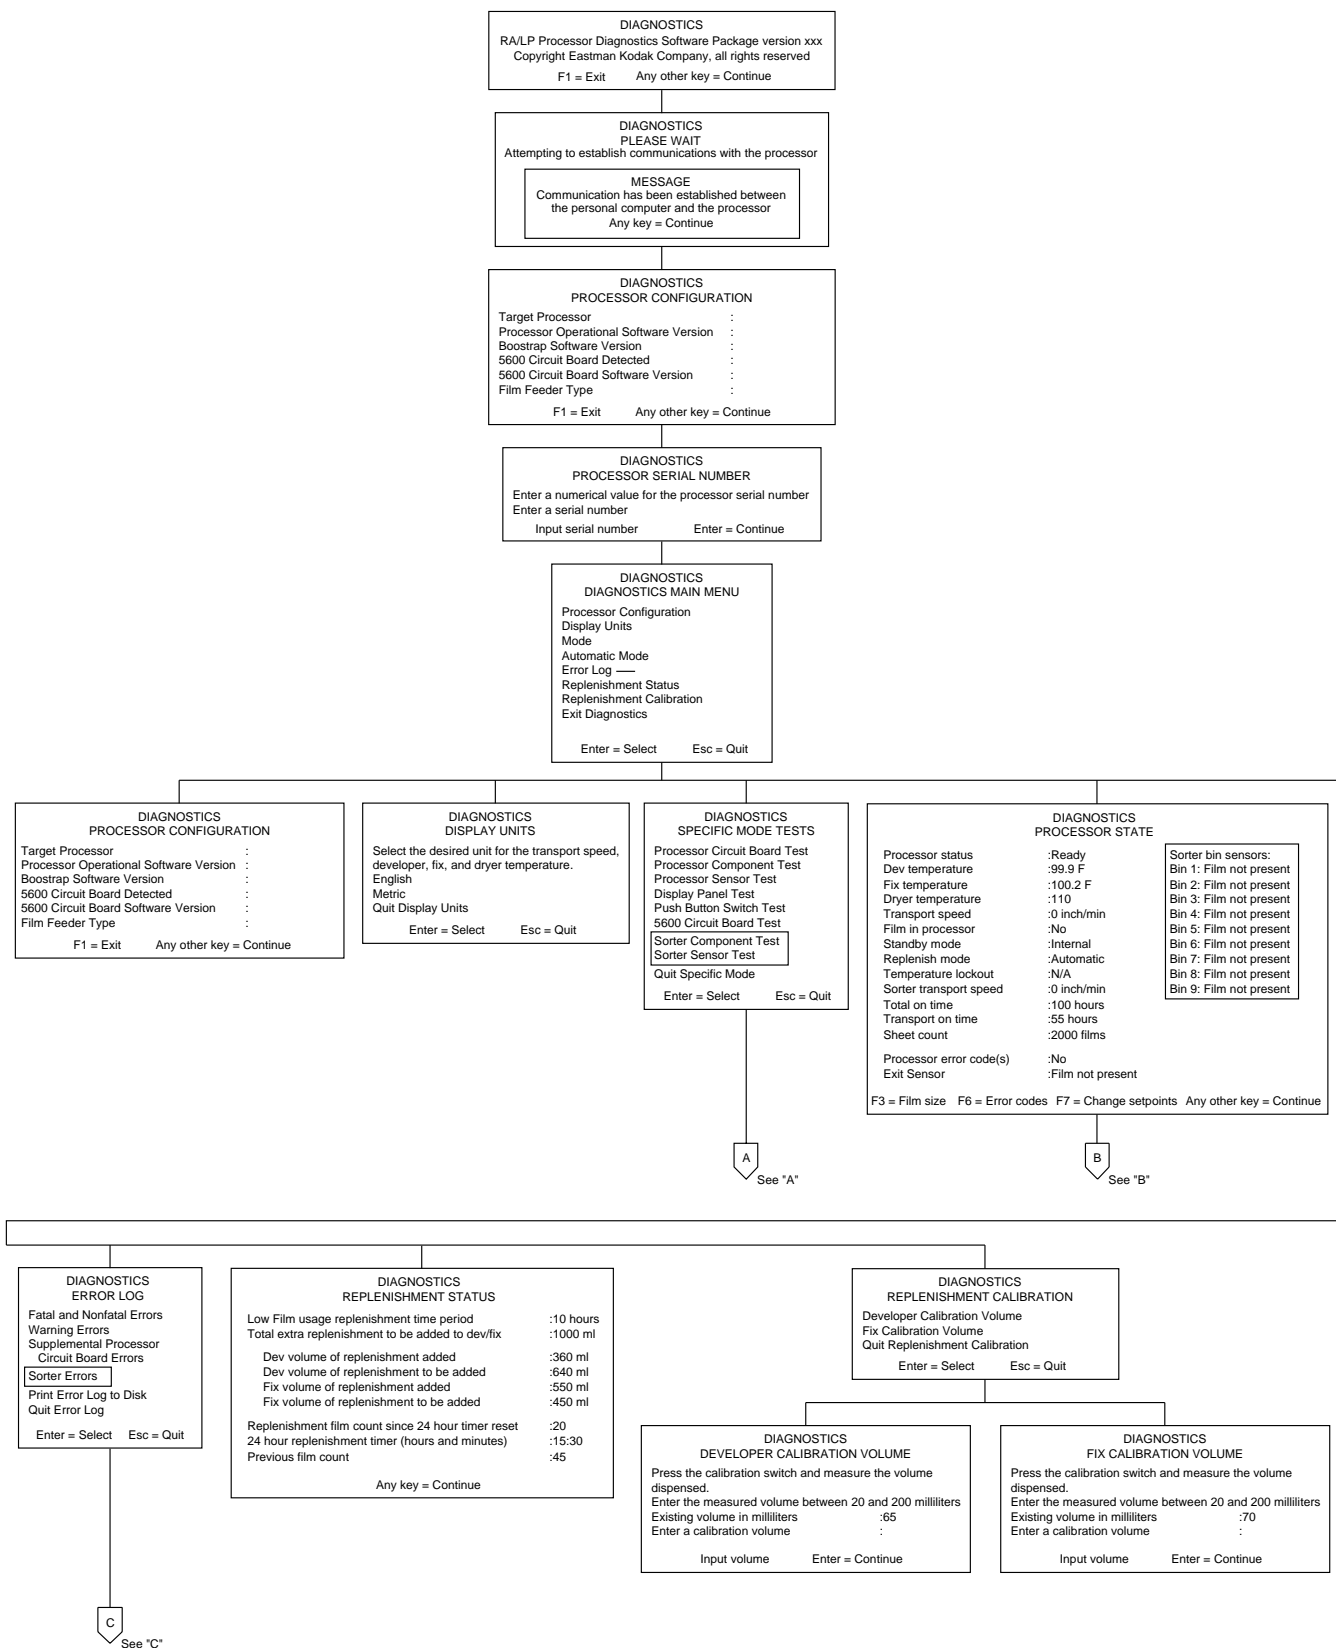

H150\_9035EC

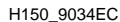 



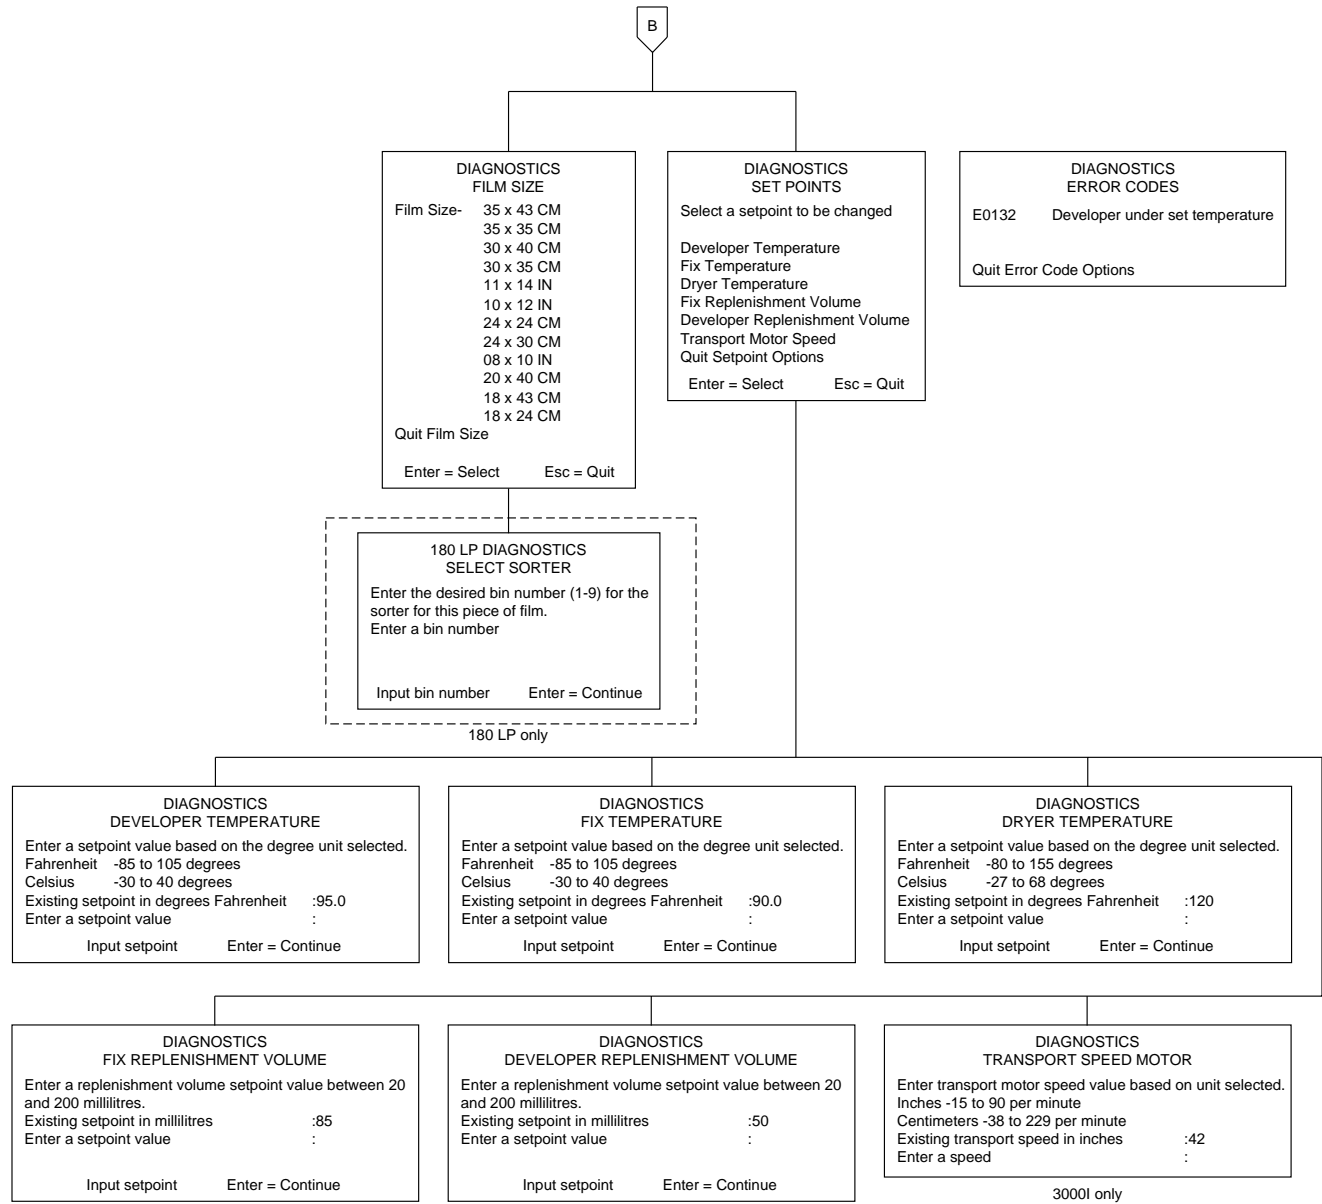

C

DIAGNOSTICS FATAL AND NONFATAL ERRORS					
CODE	DESCRIPTION	COUNT	CODE	DESCRIPTION	COUNT
E001	5000 Circuit Board Error	0	E037	Loss of dev. heating	0
E002	Dryer over temperature	0	E038	Loss of dev. cooling	0
E003	Loss of film acc. link	0	E039	Loss of fix heating	0
E004	Inoperative transport	0	E040	Inoperative dryer	0
E005	Open dryer overtemp	0	E041	Loss of transport speed	0
E006	Initialization Error	0	E042	Loss access. data link	0
E007	Dev. therm failure	0	E043	RAM Battery failure	0
E008	Fix therm failure	0	E044	Display RAM error fail.	0
E009	Dryer therm failure	0	E045	Display data link error	0
E010	A to D failure	0			
E013	Level Sense failure	0			
E032	Dev. tank fill error	0			
E033	Fix tank fill error	0			
E034	Unable to det. dev. tmp.	0			
E035	Unable to det. fix tmp.	0			

Enter error code number to be cleared:  
Input error code number A = clear all error codes  
Enter = Continue

DIAGNOSTICS WARNING ERRORS					
CODE	DESCRIPTION	COUNT	CODE	DESCRIPTION	COUNT
E128	Processor not in place	0	E138	Invalid Film Accum. data	0
E129	Tanks are being filled	0	E139	Exit Sensor warning	1
E130	Replenish, pumps disabled	0	E141	Low Dev. tank error	0
E132	Dev. under set tmp.	2	E142	Low Fix tank error	1
E133	Dev. over set tmp.	0			
E134	Dryer under set tmp.	3			
E137	Film Accum. LED warning	N/A			

Enter error code number to be cleared:  
Input error code number      A = clear all error codes      Enter = Continue

DIAGNOSTICS SUPPLEMENTAL PROCESSOR CIRCUIT BOARD ERRORS		
CODE	DESCRIPTION	COUNT
E064	Illegal opcode error	N/A
E065	Watchdog timer error	N/A
E066	Slow clock error	N/A
The following errors constitute the causes of the E001 Processor circuit board error.		
E067	RAM error	0
E068	I/O error	0
E069	Undefined	N/A
E070	Bootstrap checksum error	N/A

Enter error code number to be cleared:  
Input error code number      A = clear all error codes      Enter = Continue

DIAGNOSTICS ERROR LOG	
<p>PRINT ERROR LOG TO DISK</p> <p>The error log have been printed to a file called errlog.bd. If the file already exists the new log data will be appended to the log data in the existing file.</p> <p>Any key = Continue</p>	
Enter = Select	Esc = Quit

180 LP DIAGNOSTICS SORTER ERRORS					
CODE	DESCRIPTION	COUNT	CODE	DESCRIPTION	COUNT
E080	Bin assembly not in place		E104	Jam at bin 4	
E081	Film tray not in place		E105	Jam at bin 5	
E082	180 LP speed out of range		E106	Jam at bin 6	
E083	Inoperative transport		E107	Jam at bin 7	
E091	Film not sensed, bin 1		E108	Jam at bin 8	
E092	Film not sensed, bin 2		E109	Jam at bin 9	
E093	Film not sensed, bin 3		E111	Unexpected film, bin 1	
E094	Film not sensed, bin 4		E112	Unexpected film, bin 2	
E095	Film not sensed, bin 5		E113	Unexpected film, bin 3	
E096	Film not sensed, bin 6		E114	Unexpected film, bin 4	
E097	Film not sensed, bin 7		E115	Unexpected film, bin 5	
E098	Film not sensed, bin 8		E116	Unexpected film, bin 6	
E099	Film not sensed, bin 9		E117	Unexpected film, bin 7	
E101	Jam at bin 1		E118	Unexpected film, bin 8	
E102	Jam at bin 2		E119	Unexpected film, bin 9	
E103	Jam at bin 3				

Enter error code number to be cleared:  
Input error code number      A = clear all error codes      Enter = Continue

180 LP only

---

**Publication History**

<b>Print Date</b>	<b>Pub No.</b>	<b>ECO No.</b>	<b>Affected Pages</b>	<b>File Name</b>	<b>Notes</b>
20APR01	7E6487	----	All	7E6487.fm	First Printing

*Kodak and X-Omat are trademarks.*

Printed in U.S.A. • 7E6487.fm

EASTMAN KODAK COMPANY  
Rochester, NY 14650

HEALTH IMAGING